

**Not intended to be a complete Operator Manual. Available upon request.**

## **Silver-Line SL-1218R**

### **Orbital Floor Refinisher (Square Buff Sander)**

**Please review and follow the suggested procedures for operation of this machine.**

A) Use the proper pad! Use a thick (1") pad (white or tan) under the bottom of the sander to hold the abrasives (sandpaper/sandscreens) under the machine and on the floor.

B) Between the bottom of the sander and the abrasive you should use a thick nylon pad. If a thin pad is used the user will not achieve the desired results. If no pad is used, the sandpaper may fly out from under the machine and injure the operator, other objects and you may damage the machine. Note: Rule of thumb is one pad per room, the more pads used the better the results.

C) Use minimal chemicals on the surface being prepared (when needed). The machine can hydroplane if there is too much liquid and lose its effectiveness.

Keep your machine electrically safe!

- Report to All Star Rents any broken or frayed electrical wires immediately!
- Never defeat the grounding system by eliminating the third prong on the machine plug or using an ungrounded receptacle.
- Never overload circuits or use fuses rated too high for the circuits.
- Always remove the plug from the power supply when servicing any part of the machine.

### **:CAUTION:**

- The thick pad (white/tan) is required at all times during operation of the machine.
- Maximum of 50' of 12ga cord from short cord off handle of machine to the power supply.

### **Control of the SL-1218R**

A) Once the machine is started, it should glide smoothly, without excessive pull or vibration, across the floor. If the unit pulls to either side or vibrates, making control difficult, check the current pad to see if it is properly seated on the carpet. Flip the pad and rotate it 180 degrees and try the machine. If the machine still pulls, change the white pad and center it properly below the SL-1218R.

B) The machine should be guided straight ahead to cover the floor at the rate required for thorough cleaning. Side to side movement can be used to bring the unit to a new area. Excessive side to side movement will simply make the job tiresome and will not improve cleaning, since the SL-1218R is already oscillating in all directions in its normal action.

### **Trouble-Shooting**

A) The unit will not start:

- Is the unit well connected into the outlet?
- Is the Reset button (Thermo-contact switch) on the front of the machine set?
- Are the plugs between the handle and the base unit well connected?
- Are the male and female plugs in good condition?
- Is the extension cord in good condition?

B) The unit makes a humming sound without moving:

- Is there an object caught between the internal plate and the casing?
- Return to All Star Rents

C) The unit starts slowly before picking up its regular speed:

- Return to All Star Rents

D) The machine pulls to one side too much:

- Check the Thick (1") Nylon pad for wear, flip the pad over and rotate it 180 degrees. Try the machine to see if it will run properly.
- Change the Thick (1") White Nylon Pad